



www.ictgroup.com.tw

Bill Recycler

BR2300

Installation Guide



International Currency Technologies Corp.

Use of Materials Limitations

International Currency Technologies Corporation (ICT) all rights reserved.

All materials contained are the copyrighted property of ICT.

All trademarks, service marks, and trade names are proprietary to ICT.

ICT reserves the right at all times to disclose or to modify any information as ICT deems necessary to satisfy any applicable law, regulation, legal process or governmental request, or to edit, refuse to post or to remove any information or materials, in whole or in part, in ICT's sole discretion.

Contents

1. Introduction

1-1. Overview	2
1-2. Features	2

2. Specifications 3

3. Packing List 4

4. Dimension 5

5. Installation

5-1. Harness Application	8
5-1-1. I/O Circuit	13
5-2. DIP Switch Setting	17
5-3. Firmware Download and Upgrade	
5-3-1. USB Pen Drive Firmware Upgrade	17
5-3-2. USB Cable Firmware Upgrade	18

6. Maintenance 19

7. Troubleshooting

7-1. Bezel LED Errors	20
7-1-1. Removing stacker jammed banknote	21
7-1-2. Removing recycler jammed banknote	22
7-1-3. Rotate the wheel to remove the jammed banknote	22

1. Introduction

1-1. Overview

The New Bill Recycler - BR2300 is equipped with a large capacity recycling unit and cash box. It is a total solution for bill transactions and greatly increases the efficiency in which change is given.

The BR2300 is equipped with innovative wide- angle banknote insertion technology to offer a superior acceptance rate of 96% or higher. With an outstanding design, the BR2300 has the ability to provide a very high degree of immunity to strong ambient light, and the advanced optical/mechanical anti-fishing structure for better investment protection. The built-in USB port allows convenient firmware upgrades via USB flash drive.

1-2. Features

- A total solution for bill transactions.
- Large capacity recycling unit.
- Unique very wide-angle banknote insertion technology.
- High immunity against strong ambient light.
- Advanced optical/mechanical anti-fishing structure.
- Convenient firmware upgrade via USB flash drive.
- MDB-FTL firmware upgrade available.
- Auto-calibration technology and multi-color optical sensor.
- Strong resistant to severe weather condition.

2. Specifications

Validation rate 96% or higher

Note: The acceptance rate excludes notes that are dirty, wet, broken or wrinkled.

Bill width validated 62~77mm

Bill Insertion 4 - way Acceptance

Escrow 1 bill

Transaction Speed 4 seconds to Recycler
5 seconds to Bill Box

Interfaces MDB, ccTalk, RS232

Power Sources DC 12V
DC 24V
DC 34V

Power Consumption Standby: 350mA, 4.2W
Operation: 2.5A, 30W
Maximum: 4A, 48W

Environment Operating Temperature : 0°C~60°C
Storage Temperature : -30°C~70°C
Humidity : 30%~95% RH
(no condensation)

Firmware Updates USB flash disk, MDB-FTL





Bill Box Capacity Bill box: 300 bills
600 bills
1000 bills
Recycler: 30 bills
(CNY: 50 bills)

Weight	300 bills: Approx.3.5kg
	600 bills: Approx.3.9kg
	1000 bills: Approx.4.4kg

3. Packing List

Main	Bill Recycler
Accessory	Harnesses: Refer to 5-1
	BR2300 Installation Guide
	BR2300 DIP Switch Setting Guide

4. Dimension

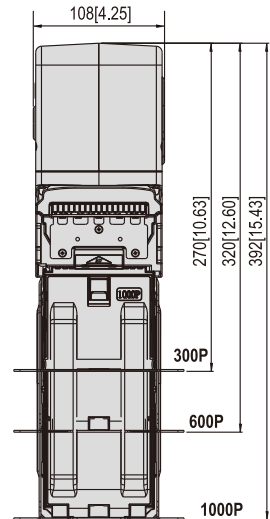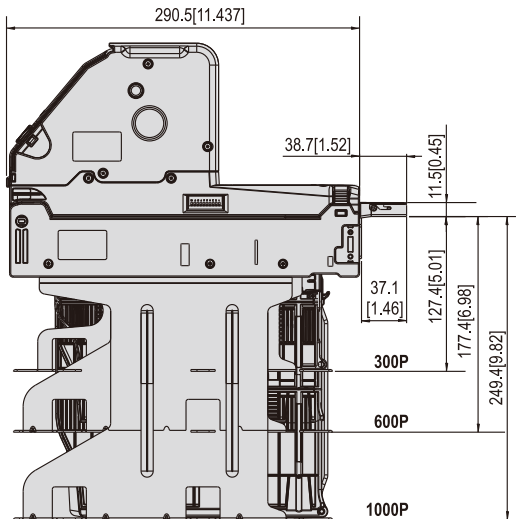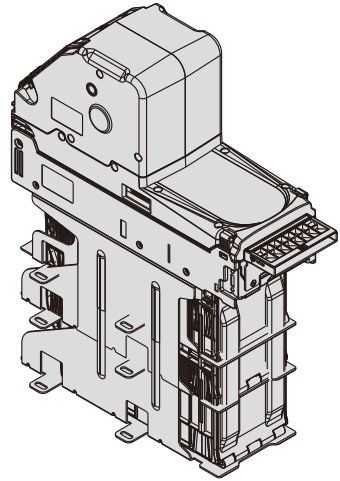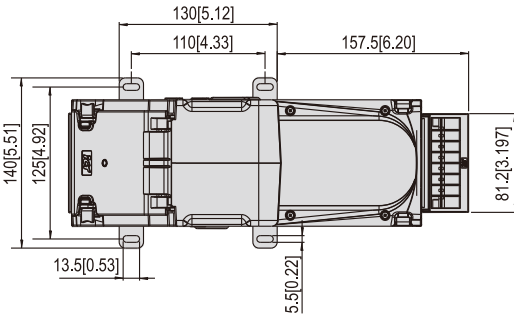


Unit : mm [inch]

4 FIG.01

Bezel Style

Rectangle Bezel


Part Number: 3ZMB-FAC50000

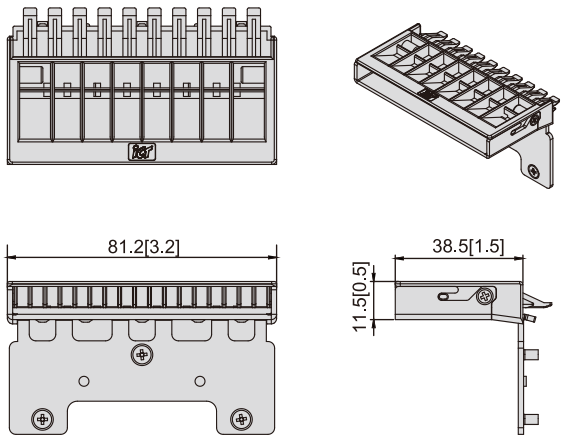

Unit : mm [inch]
4 FIG.02

Metal Short Bezel


Part Number: 3ZMB-FAC60000

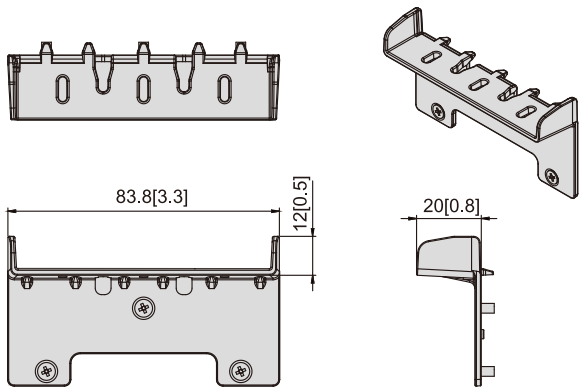

Unit : mm [inch]
4 FIG.03

Plastic Short Bezel

Part Number: 3ZMB-FAC61000

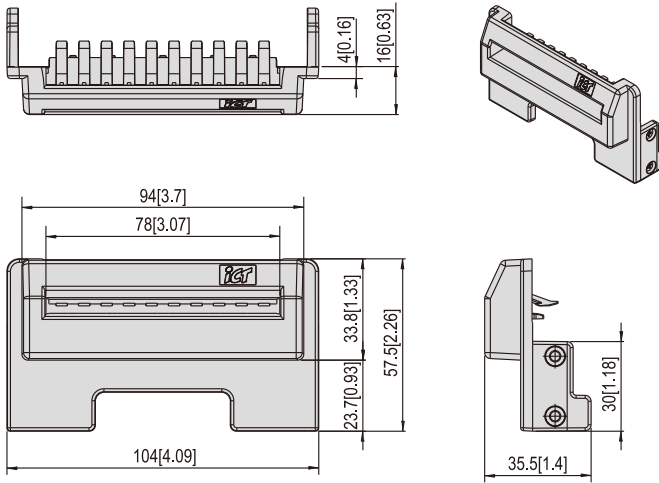

Unit : mm [inch]

4 FIG.04

5. Installation


5-1. Harness Application


5-1 TABLE.01

Interface	Used Voltage	Usage	Harness	Page
RS232	12/ 24/ 34V DC	Power & *Data Comm.	WEL-RB2B208-1	8
MDB			WEL-RB2B209	9
ccTalk	12/ 24V DC		WEL-RB2B206-1	10
MDB	12/ 24/ 34V DC		WEL-RB2B217(Optional)	11
USB Download	-	USB Extension Wire	WEL-RX7P02-1(Optional)	12

*Data Comm. : Data Communication.


5-1 FIG.01

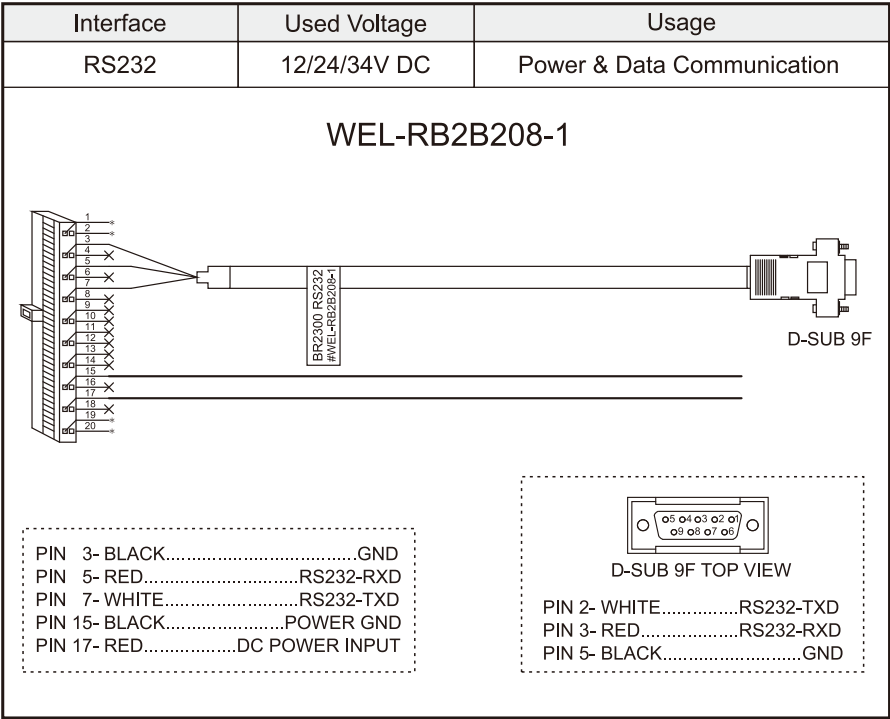

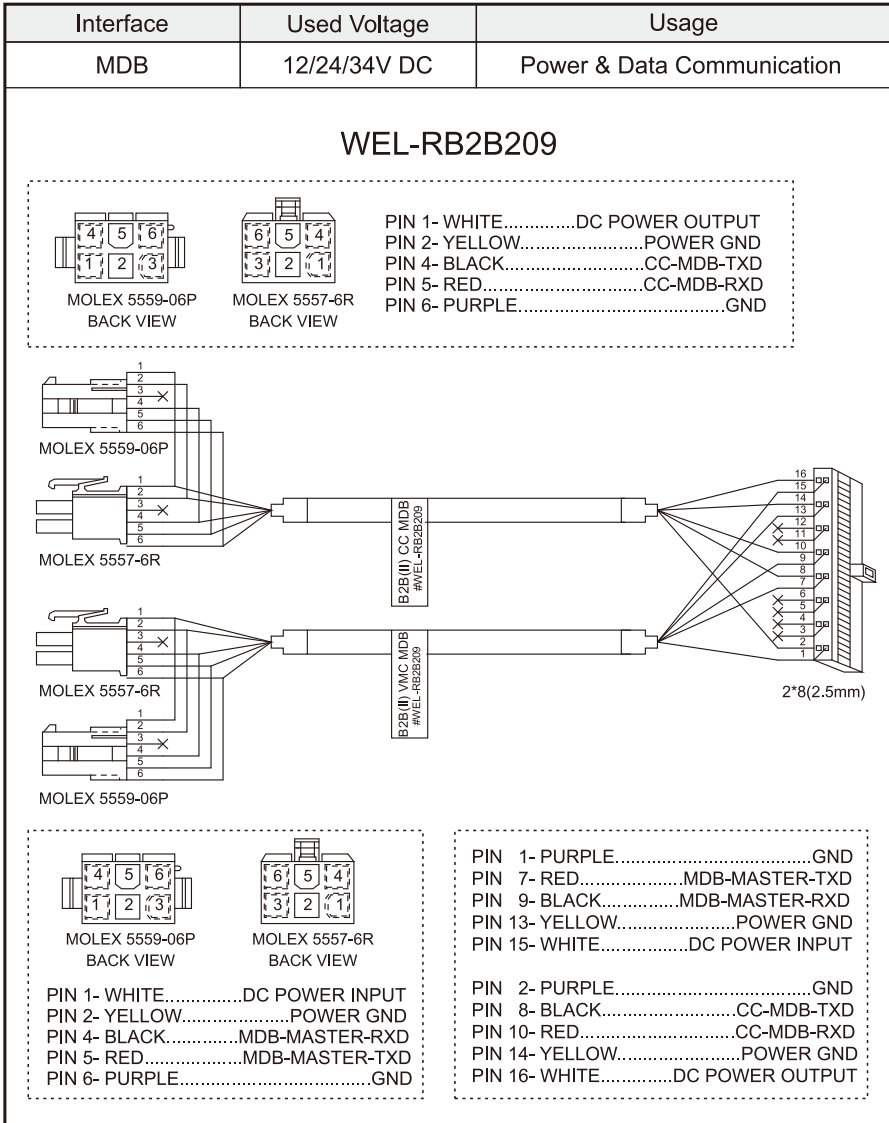


Interface	Used Voltage	Usage
ccTalk	12/24V DC	Power & Data Communication

WEL-RB2B206-1

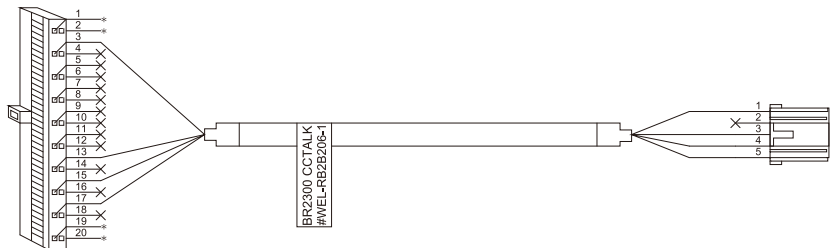

PIN 3- BLACK.....GND
PIN 13- YELLOW.....DATA
PIN 15- WHITE.....POWER GND
PIN 17- RED.....DC POWER INPUT


PIN 1- RED.....DC POWER INPUT
PIN 3- YELLOW.....DATA
PIN 4- BLACK.....GND
PIN 5- WHITE.....POWER GND

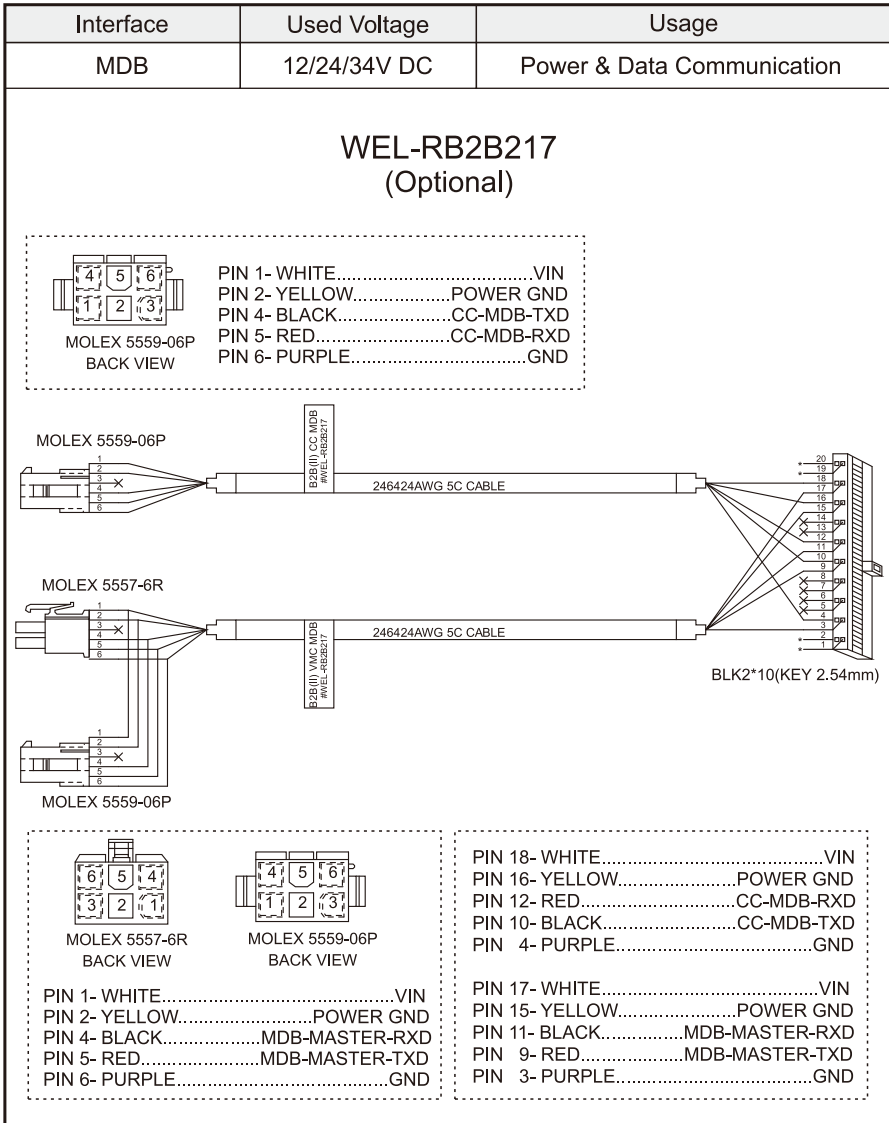

5-1 FIG.05

Interface	Used Voltage	Usage
USB Download	-	USB Extension Wire

WEL-RX7P02-1
(Optional)

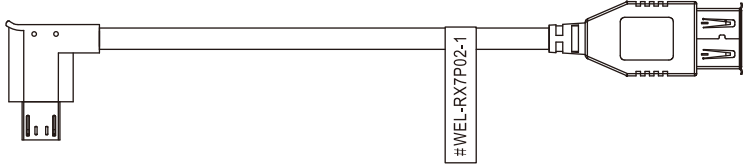

1

5



PIN 1- RED.....VCC

PIN 2- WHITE.....D-

PIN 3- GREEN.....D+

PIN 5- BLACK.....GND

1

2

3

4



PIN 1- RED.....VCC

PIN 2- WHITE.....D-


PIN 3- GREEN.....D+

PIN 4- BLACK.....GND

5-1-1. I/O Circuit


RS232 Interface

5-1-1 FIG.01

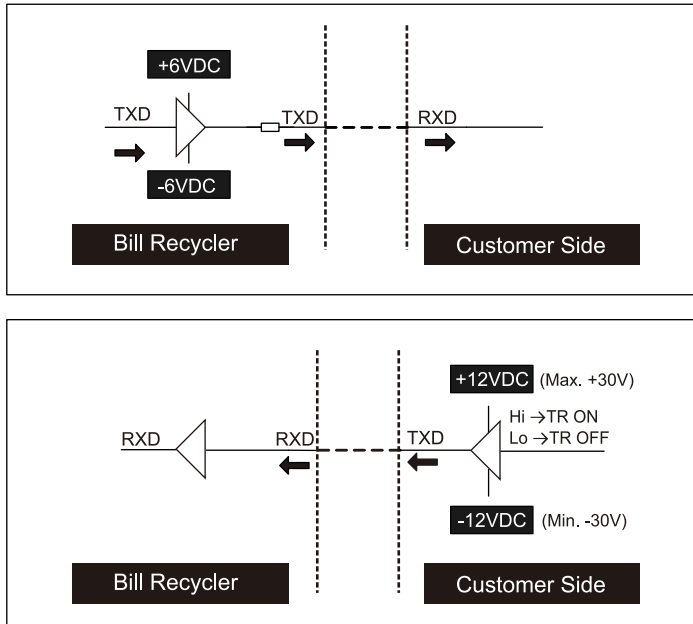



MDB Interface(To VMC).

5-1-1 FIG.02

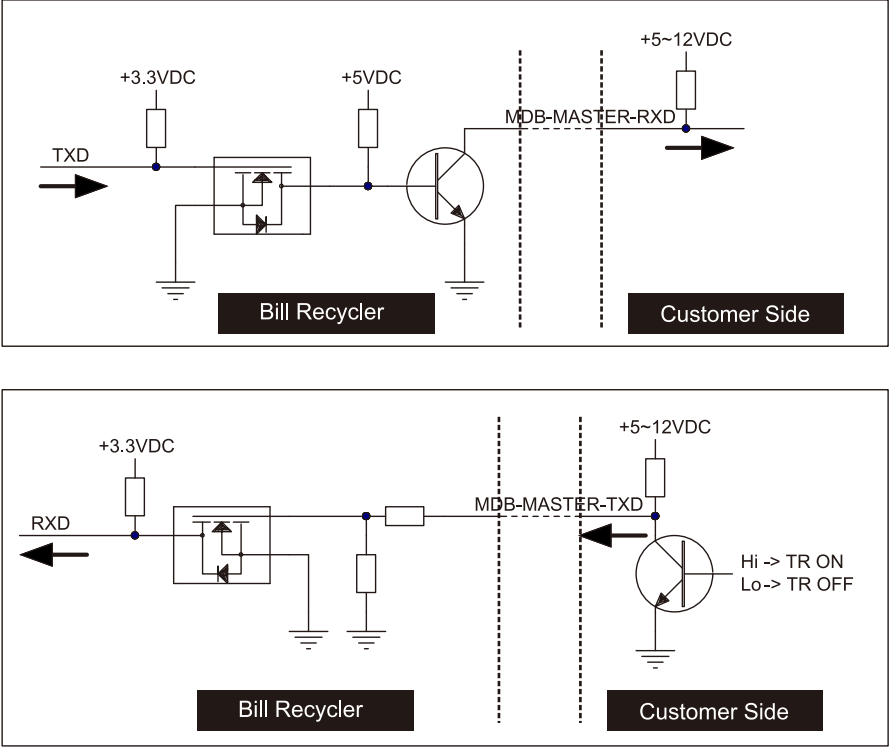


MDB Interface(To Coin Changer).

5-1-1 FIG.03

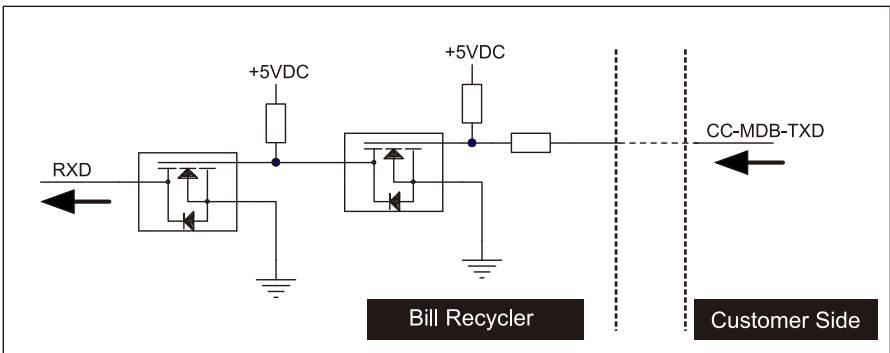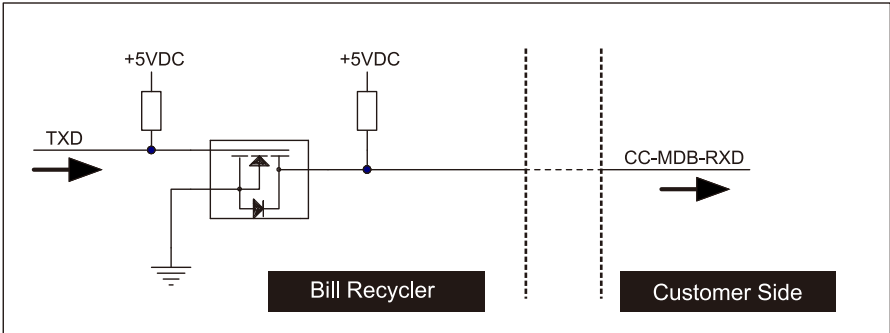

ccTalk interface


5-1-1 FIG.04

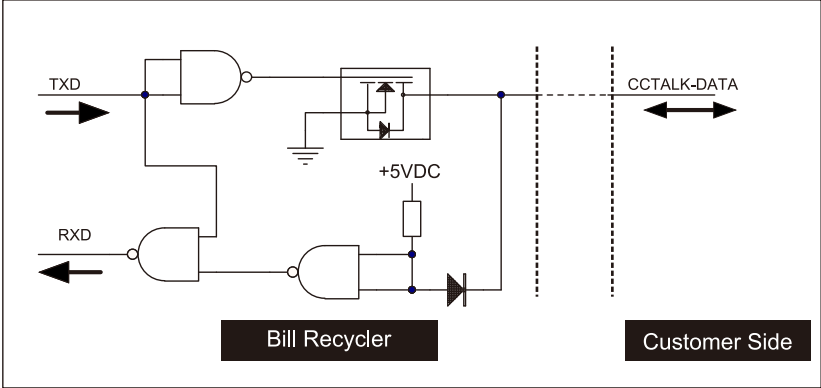

5-2. DIP Switch Setting

There's a serial DIP switches which is located on the side of BR2300. According to different currencies or interfaces which are used by users, DIP switch settings could be varied to fit users' need.

Please refer to "BR2300 DIP Switch Setting" Guide in the package for more detail.

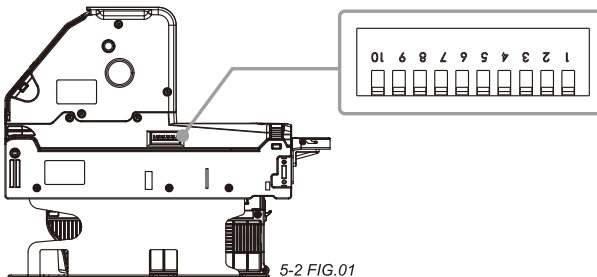


5-2 FIG.01

5-3. Firmware Download and Upgrade

5-3-1. USB Pen Drive Firmware Upgrade


Step 1.

Put the "BTBxxxxxx.bin" file into your USB Flash Disk.

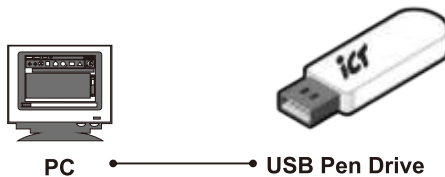

Step 2.

Turn off BR2300, plug the USB Flash Disk into the USB connector on the BR2300 with USB extension cable and then turn on the BR2300.

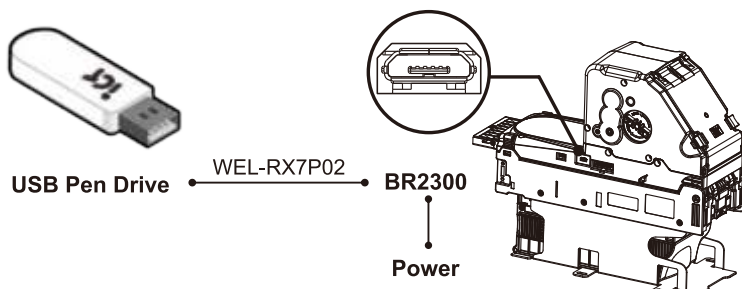


Step 3.

The LED in the front side of bezel will flash twice, then remove the USB Flash Disk from BR2300.

Step 4.

Wait for about 30sec., then BR2300 will automatically reset and standby for normal operation.

5-3-2. USB Cable Firmware Upgrade

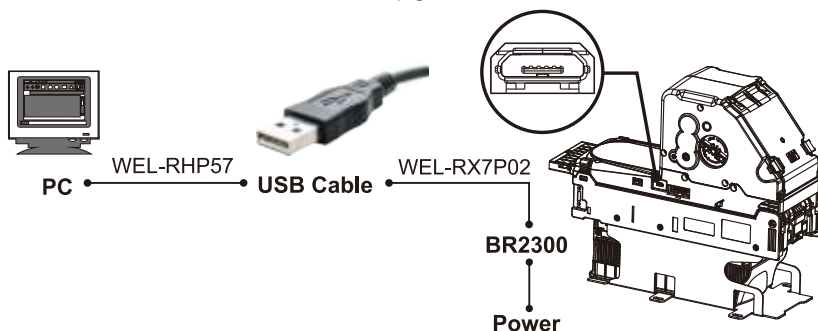


6. Maintenance


To make sure the bill recycle always works smoothly, please clean the internal parts regularly.

To clean the internal parts:


1. Turn bill recycle off.
2. Press the buttons on the side of BR2300 cover and lift the unit .
3. Use a soft, dry cloth, or towel to clean the bill path and sensors.

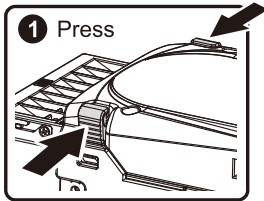

6 FIG.01-1

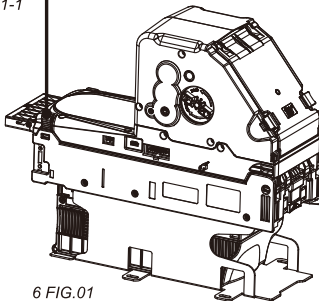

6 FIG.01

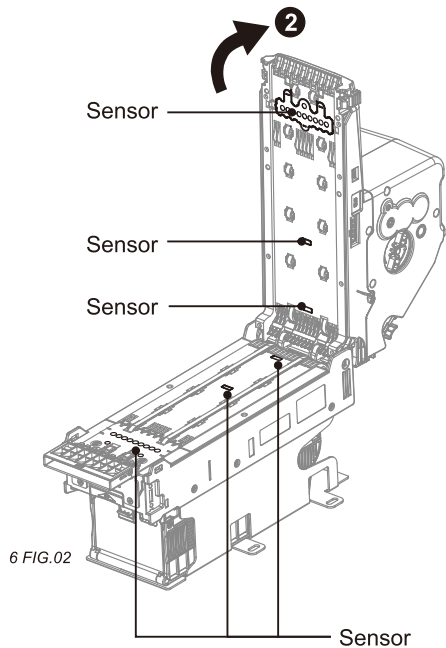

6 FIG.02



Maintenance Notice
(Any improper maintenance will result invalid warranty.)

Recommended	Mild, non-abrasive, soap water.
DO NOT USE	Organic solvent , Alcohol, Volatile liquid.

7. Troubleshooting

7-1. Bezel LED Errors

7-1 TABLE 01

LED	Meaning	Solutions
Green	White card Calibration	Use ICT white card to calibration Bill Validator.


7-1 TABLE 02

LED Flashes		Meaning	Solutions
Red	Green		
1		Indicate that something has jammed the bill path.	Inspect for foreign object or banknote. (Refer to page 21 & 22)
2		Indicate that bill acceptor is not enable.	Please inspect dip switch setting.
3		Indicate that bill acceptor is having input sensor problem.	Please inspect or clean any foreign object on sensor or on bill path. (Refer to page 19)
3	1	Optical anti fishing sensor module error	Remove LED housing: Inspect for foreign object and clean on Security hook.
3+2		Indicates that the unit is having hook sensor problem.	
3+4		Banknote path sensor error	
4		Indicates that the unit has detected fishing issue.	Inspect for dirt or foreign object on sensor or on bill path. (Refer to page 19)
5		Stacker open	Stacker removed.
5	1	Recycle motor problem	Clean foreign object from inside of Recycler. (Refer to page 22)
5	3	Recycle sensor problem	
5	2	Recycle bill jam	
5	4	Recycle full problem	Confirm that the Mylar in Recycle is the end.
6		Stacker problem	Stacker full of banknote or the press banknote module error.
7		Indicates that the unit is having motor problem.	Inspect for dirt or foreign object on sensor or on bill path.




If the error can not be solved after corrective actions or it recurs, please contact ICT for technical support.


7-1-1. Removing stacker jammed banknote.

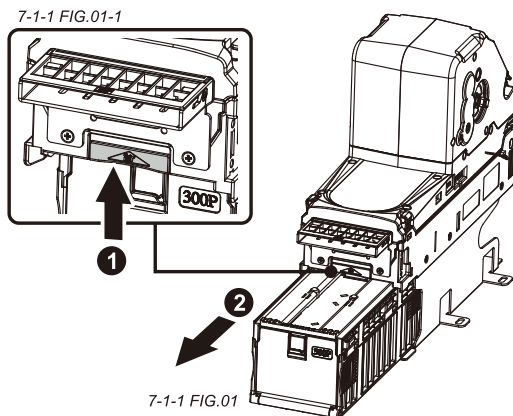


To remove the stacker from front or rear, you only need to press the white button and pull the stacker out.

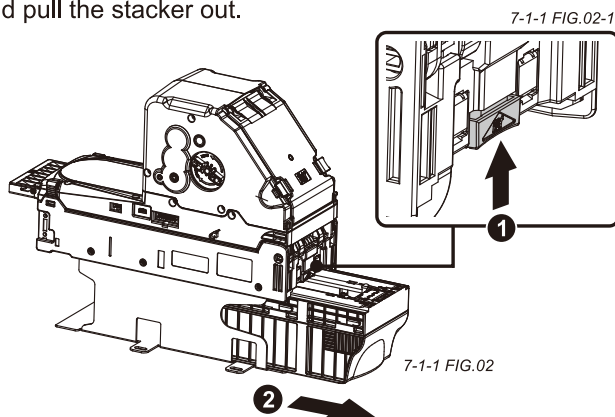

7-1-2. Removing recycler jammed banknote.

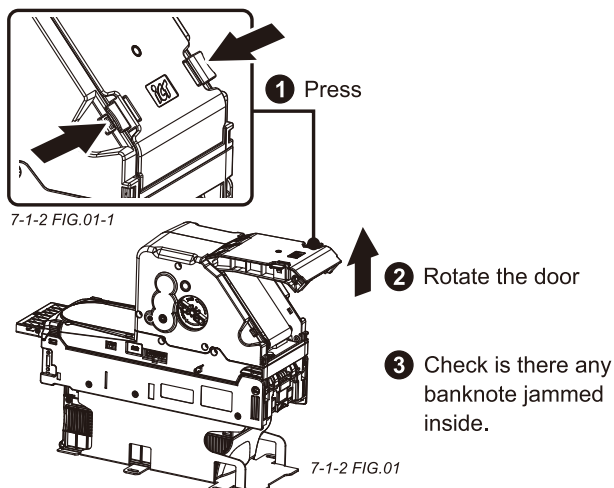

7-1-3. Rotate the wheel to remove the jammed banknote.

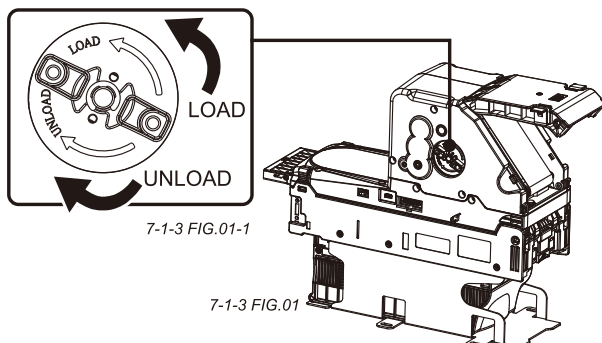

Having the incident of banknote jam in the recycler, be sure to take out all the notes in it so that in the next operating act, the counting of banknotes could remain correct in the recycler.



International Currency Technologies Corporation

No.28, Ln. 15, Sec. 6, Minguang E. Rd., Neihu Dist., Taipei City 114, Taiwan

sales@ictgroup.com.tw (For Sales)

fae@ictgroup.com.tw (For Customer Service)

Website: www.ictgroup.com.tw

