



Data Audit Box

# DAB-V

Installation Guide



International Currency Technologies Corp.

## **Use of Materials Limitations**

International Currency Technologies Corporation (ICT) all rights reserved.

All materials contained are the copyrighted property of ICT.

All trademarks, service marks, and trade names are proprietary to ICT.

ICT reserves the right at all times to disclose or to modify any information as ICT deems necessary to satisfy any applicable law, regulation, legal process or governmental request, or to edit, refuse to post or to remove any information or materials, in whole or in part, in ICT's sole discretion.

## Contents

|                                                                  |           |
|------------------------------------------------------------------|-----------|
| <b>Before to use.....</b>                                        | <b>2</b>  |
| <b>1. DAB-V operating mode</b>                                   |           |
| 1-1. Dimension.....                                              | 3         |
| 1-2. DAB LED indicator function introduction.....                | 4         |
| 1-3. Installation (connect to VMC & peripheral device)....       | 7         |
| 1-4. Dip Switch Function Description.....                        | 8         |
| 1-5. DAB initialized (boot up self testing).....                 | 10        |
| 1-6. Stand by mode.....                                          | 10        |
| 1-7. Transaction Export Mode.....                                | 11        |
| 1-8. DAB firmware upgrade mode.....                              | 13        |
| 1-9. Upgrade Peripherals Device Firmware.....                    | 15        |
| 1-10. Log export Mode (only for ICT Engineer Debug Use)<br>..... | 17        |
| 1-11. Setup and testing mode.....                                | 20        |
| 1-12. Audit data backup export mode.....                         | 21        |
| 1-13. DAB Recovery Factory Mode.....                             | 22        |
| 1-14. Parameter Setting Mode (via USB Pen Drive).....            | 23        |
| <b>2. DAB audit box tool</b>                                     |           |
| 2-1. Before Start.....                                           | 24        |
| 2-2. Audit Box Tool Introduction.....                            | 25        |
| 2-3. Profile (USB Stick).....                                    | 26        |
| 2-3-1. Printer Scripe.....                                       | 28        |
| 2-3-2. Printer Settings.....                                     | 36        |
| 2-3-3. Product Name & Tax Rate Edit Tool.....                    | 37        |
| 2-4. Settings & View (connection).....                           | 38        |
| 2-5. Audit File.....                                             | 43        |
| 2-6. Single Transaction File .....                               | 45        |
| 2-7. Auto Test .....                                             | 47        |
| <b>Error status &amp; troubleshooting.....</b>                   | <b>50</b> |

# DAB-V

## Before to Use

To check below:

1. Need to install [.Net Framework 4 Client Profile ] version (you can download from Microsoft website) on your PC (Microsoft OS, XP above) before operating DAB on your PC via DAB Audit Box Tool.
2. Need to install Office Excel 2003 or above.
3. DAB's is receiving power from VMC while DAB it is installed on the vending machine.
4. You need to prepare a power supply for DAB while DAB is connecting to PC for parameter settings.
5. You can re-set the encryption key via DAB Audit Box Tool if you would like to change the factory default value "0, 0, 0, 0".  
Please refer to section 2-5 AUDIT FILE.
6. You can re-set DAB time setting to your local time (please refer to section 2-4). The default time-setting is Taiwan time. (GMT+8).
7. You would find below items on DAB Product:
  - a. DAB-V
  - b. USB-to-USB type-A cable
  - c. VCCS Communication cable



VCC Communication Cable


USB-to-USB Cable



DAB-V

## 1. DAB-V Operating Mode

### 1-1. Dimension

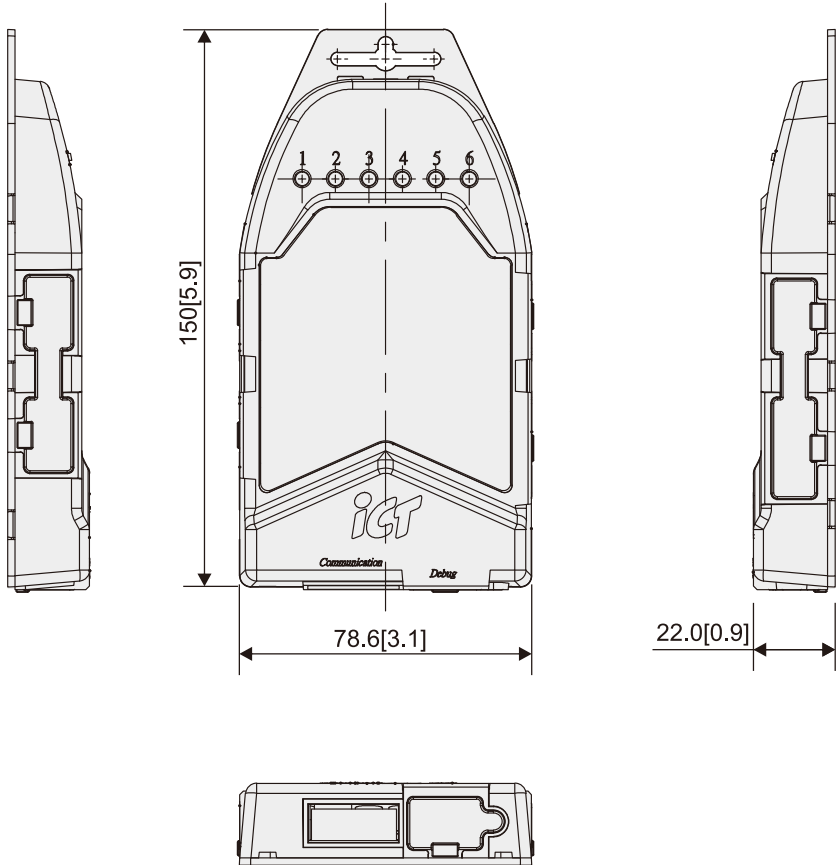

Unit : mm [inch]



## LED type

| Indicator | Function                                                      |
|-----------|---------------------------------------------------------------|
| LED1~LED4 | Mode Status Indicator                                         |
| LED5      | Upgrade Error Indicator                                       |
| LED6      | Stand-by-mode Indicator VMC Indicator/ time setting Indicator |

### Mode Status Indicator

Please refer to each section of mode operation.

### Upgrade Error Indicator

Please refer to section 1-10, page 17.

### Stand-by-mode Indicator

1. LED6 flash in green means the DAB is in stand-by-mode ready for use.
2. LED6 flash in red means the DAB is in stand-by-mode, but time setting is back to default value of [2019/01/01 00:00:00] due to no button battery attached or low battery power. You need to power-off DAB and replace the button battery, reset the time setting and then power-on to show you LED6 flash in green again.
3. LED6 flashes in orange means the DAB is in stand-by-mode, but is working on getting the debug code from peripheral devices. LED6 would back to flash in green once the task finished.

## Function for Stand-by-mode

| Function                            | Remark                                                           |
|-------------------------------------|------------------------------------------------------------------|
| Record the communication (log) data | Save the communication data from VMC/ Coin Change/ Bill Acceptor |
| Record the transaction data         | 1. Save EVA/DTS data<br>2. Save each single transaction data     |

## Peripheral Device (VMC/BA/CC/Cashless/NDE) Status Indicator

In stand-by-mode (LED6 flash in green), and without to press “**select**” button, the LED1, LED2, LED3, LED4 and LED5 would show the status of the devices connected to the DAB. Below are the LED Indicators description.

| LED# | Communication in normal                           | No Communication                                                         |
|------|---------------------------------------------------|--------------------------------------------------------------------------|
| LED1 | Green light, VMC communication normally           | No light, VMC does not communication or device does not exist.           |
| LED2 | Green light, coin change communication normally   | No light, coin change does not communication or device does not exist.   |
| LED3 | Green light, bill acceptor communication normally | No light, bill acceptor does not communication or device does not exist. |
| LED4 | Green light, cashless communication normally      | No light, cashless does not communication or device does not exist.      |
| LED5 | Green light, NDE communication normally           | No light, NDE does communication or device does not exist.               |

## 1-3. Installation (connect to VMC & peripheral device)

### First step


- Power-off the vending machine
- Connect DAB's VCCS (female) connector to VMC's VCCS connector (Male).

### Second step

Connect DAB's MDB (female) or VCCS (male) connector to ICT Bill Acceptor's MDB (male) or VCCS (female) connector.

Connect DAB's VCCS (male) connector to ICT Coin change's VCCS (female) connector.

Please refer to below configuration

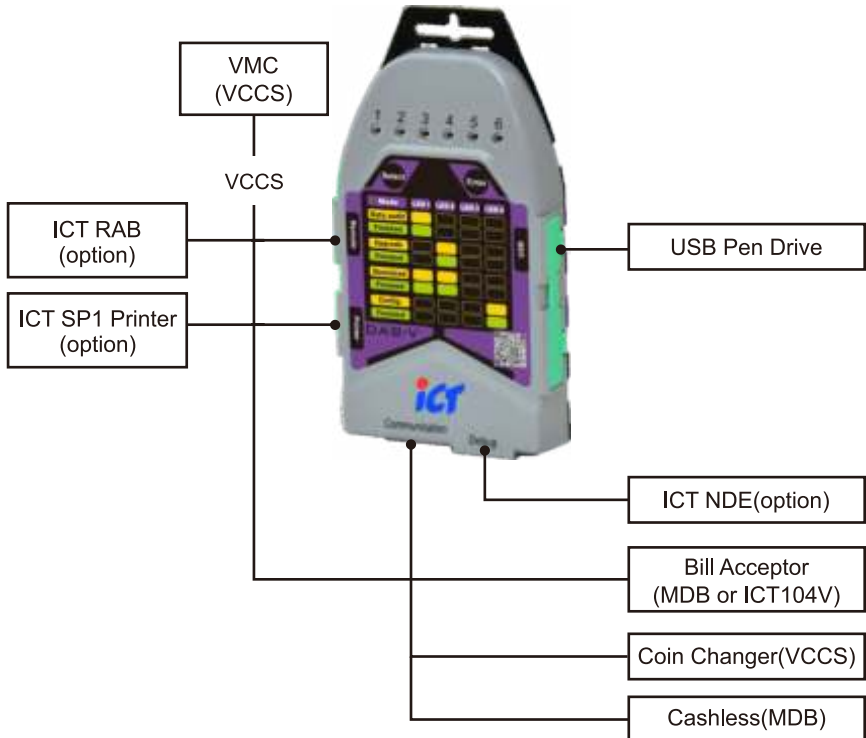

## 1-4. Dip Switch Function Description

### SP1 Printer abnormally disabled periphery:

| Operation method           | Function                                                                                                                    |
|----------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| DIP Switch#2 set up to ON  | When the SP1 printer abnormality occurs, the DAB disables the transaction, including when the SP1 printer is not connected. |
| DIP Switch#2 set up to OFF | When the SP1 printer abnormality occurs, the vending machine can continue to trade, DAB doesn't disabled periphery.         |

### Escrow settings:

User can set up whether the ESCROW needs or not. The setting is as below.

| Escrow | DIP Switch Setting         | Remark                                                                                                                                                                                                                                                                     |
|--------|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ON     | DIP Switch#6 set up to OFF | Would accept one bank note only while the currency less than or equal to the value the user set up and the coin change has enough coins, at least the same value as the bank note's, inside. If exceed the values or no enough coins, then BA would return this bank note. |
| OFF    | DIP Switch#6 set up to ON  | Would keep accepting the bank note until the currency exceed to the value the user set up or exceed the coin total value in the coin change.                                                                                                                               |

### Diverse Interface Supported:

Please note that the DAB-V can be used only on VMC with VCCS interface. For Bill Acceptor, it can support as below table:

| Interface | Support Devices             | Remark                             |
|-----------|-----------------------------|------------------------------------|
| VCCS      | Coin Change & Bill Acceptor | Would ignore DIP Switch#7 settings |
| MDB       | Bill Acceptor               | Please setup DIP Switch#7 "OFF"    |
| ICT 104V  | Bill Acceptor               | Please setup DIP Switch#7 "ON"     |

**Bill Acceptor returns error code switching :**

| Function            | Operation method      | Remark                                                        |
|---------------------|-----------------------|---------------------------------------------------------------|
| NoReturn Error Code | DIP Switch#8<br>"OFF" | Bill Acceptor will not return error code when there is error. |
| Return Error Code   | DIP Switch#8<br>"ON"  | Bill Acceptor will return error code when there is error.     |

**Cashless deduction peripheral disable setting :**

| Function                                                         | Operation method      | Remark                                                                                                                                                                                                                  |
|------------------------------------------------------------------|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Deduction successful<br>disable peripheral<br>equipment          | DIP Switch#5<br>"OFF" | 1. The Cashless device is disabled after the successful deduction; otherwise, if the cash is first input, the Disable Cashless device.<br>2. All peripheral devices will be enabled after the transaction is completed. |
| Deduction successful<br>will not disable<br>peripheral equipment | DIP Switch#5<br>"OFF" | The Cashless device deducts the success and does not disable the peripheral device.<br>If the cash is first put in, it is not a Disable Cashless device.                                                                |

**Cashless device restore settings :**

| Function                                | Operation method      | Remark                                                                                                                                                                                                                                                                                                    |
|-----------------------------------------|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Return the change<br>amount to Cashless | DIP Switch#4<br>"ON"  | 1. When the card exists, the change amount will be directly returned to the card after the transaction is completed.<br>2. When the card does not exist, the change amount will be changed by Coin Changer after the transaction is completed. The amount that cannot be changed will be restored to VMC. |
| Use cash to change                      | DIP Switch#4<br>"OFF" | After the transaction is completed, the amount of change will be changed by Coin Changer. If the amount cannot be changed, the amount will be restored to VMC.                                                                                                                                            |

## 1-5. DAB Initialized (boot up for self-testing)

DAB will automatically process a self-test while the power feeds. During the self-test, it would check its hardware, memory, checksum, etc. Once the self-test completed successfully, DAB would be on “**Stand by mode**” with LED6 flashing in green as below.



For this mode, the DAB would start monitoring/recording the transaction data the way from/to VMC & Bill Acceptor, Coin Acceptor.

Once the self-test is failed, it would show all the 6 LEDs in red. For that, please contact ICT's Sales/FAE for the support.



If show other LEDs in red. For that, please contact ICT's Sales/FAE for the support.

## 1-6. Stand-by Mode

Generally, DAB would be on stand-by mode in default, which shows LED6 flashing in green as below.



**In stand-by mode, DAB would work on monitoring and recording communication/transaction data between VMC and BA/CC.**

| Function                        | Description                                                  | Remark                                                           |
|---------------------------------|--------------------------------------------------------------|------------------------------------------------------------------|
| Record communication (log) data | Record the log data while communicating among VMC, BA and CC | Log data would be helpful for ICT technician for troubleshooting |
| Record transaction data         | Record each transaction data while VMC machine operating     | 1. record EVA/DTS data<br>2. record each transaction data        |

## 1-7. Transaction Export Mode

In stand-by mode, the user can simply plug the USB Pen Drive into USB port to upload the transaction data automatically into the USB Drive. When the LED1 is in green, it means the upload process finished and DAB would go ahead next two operations of **“DAB firmware upgrade mode”** & **“Upgrade BA/CC firmware mode”**. When above operations finished, the user can un-plug the USB Pen Drive.

Please refer to below LED status while the transaction data export.

### LED Indicator

|                                                                                     |                                                                                       |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|  | LED1 would light in yellow means the system in <b>“Transaction export mode”</b> .     |
|  | LED1 would flash in yellow means the system in process of transaction data exporting. |
|  | LED1 would light in green means the transaction data export completed.                |
|  | LED1 would light in red, it means the transaction data export failed.                 |

**During operating this mode, DAB would cut out the communication among VMC, BA and CC**

| Function                       | Description                                                                                                                                       | Remark                                                                                   |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| EVA/DTS Data output            | Those EVA/DTS data would be saved to the folder “ <b>EVADTS</b> ” of USB Pen Drive (the folder would be created automatically).                   | Output filename:<br>“ <b>Version_read time.eneva</b> ”                                   |
| Audit Data backup output       | Those EVA/DTS data would be backup to Pen Drive as well.                                                                                          | Please refer to<br>[ <b>Audit's Backup Data export mode</b> ]                            |
| Single Transaction data output | Single transaction data that has not been exported will be the folder “ <b>PAY</b> ” of USB Pen Drive (the folder would be created automatically) | Output file name:<br>“ <b>Serial number_1st record time_the last record time.enbin</b> ” |

**Note:**

1. Extension filename is [enbin] or [eneva] means the file is encrypted.
2. Before those two “**DAB firmware upgrade mode**” & “**Upgrade BA/CC firmware mode**” finished, please do not remove USB Pen Drive.
3. The method to decrypt backup file, please refer the chapter Audit Box Tool

## 1-8. DAB Firmware Upgrade Mode

Upon above transaction export mode finished, keep the USB Pen Drive in plug, DAB would go ahead to check if any DAB itself firmware needed to upgrade. In case of new firmware existed, DAB would process firmware upgrade and the LED would be shown as below. When the LED2 is in green, it means the firmware upgrade finished and DAB would go ahead next operation of **“Upgrade BA/CC firmware mode”**.

### LED Indicator

|                                                                                                          |                                                                                |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| <br>LED1 LED2 LED3 LED4 | LED2 shine in amber, it means system in <b>“DAB update firmware mode”</b> .    |
| <br>LED1 LED2 LED3 LED4 | LED2 flash in amber, it means system searching the file or firmware upgrading. |
| <br>LED1 LED2 LED3 LED4 | LED2 shine in green, it means DAB firmware upgrade completed.                  |
| <br>LED1 LED2 LED3 LED4 | LED2 shine in red, it means DAB firmware upgrade failed.                       |

**During operating this mode, DAB would cut out the communication among VMC, BA and CC.**

| Function                             | Description                                                                                                                                                                                                                                   | Remark                                                                                                              |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Sorting Path and setting             | DAB would check if [ <b>ecf</b> ] folder existed in Pen Drive, if yes, then go to this folder to get the file for upgrading DAB firmware. If no [ <b>ecf</b> ] folder, then go to root older to find the ecf file for upgrading DAB firmware. | 1. [ <b>ecf</b> ] wording can be big or small letter.<br>2. User can create ecf folder on USB Pen Drive in advance. |
| Recognize and Read the firmware file | This firmware would be with extension file name “ <b>.bin</b> ” for DAB to recognize.                                                                                                                                                         | In case of two files existed, DAB would choose the latest one to process of firmware upgrade.                       |
| Upgrade DAB Firmware                 | In process of the firmware upgrade with “ <b>.bin</b> ” file.                                                                                                                                                                                 | DAB would run this new firmware once the upgrade finished.                                                          |

**Note:**

Please make sure the firmware must be saved to the root folder or the folder “**ecf**” of USB Pen Drive before inserting this Pen Drive to DAB.

## 1-9. Upgrade Peripherals Device Firmware

Upon above DAB firmware upgrade finished, DAB would automatically check if the firmware of BA/CC/SP1 Printer existed then go to BA/CC/SP1 Printer firmware update process. The LEDs would be shown as below. When both LED1 & LED2 are in green, it means the BA/CC/SP1 Printer firmware upgrade finished and the user can un-plug the USB Pen Drive. Please make sure the BA/CC/SP1 Printer devices should be FTL protocol supported.

### LED Indicator

|                                                                                                          |                                                                                                  |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| <br>LED1 LED2 LED3 LED4 | LED1 & LED2 in amber light, it means system in <b>"update BA/CC/SP1 Printer firmware mode"</b> . |
| <br>LED1 LED2 LED3 LED4 | LED1 & LED2 flash in amber, it means system searching the file or firmware upgrading.            |
| <br>LED1 LED2 LED3 LED4 | LED1 & LED2 in green light, it means Device firmware upgrade completed.                          |
| <br>LED1 LED2 LED3 LED4 | LED1 & LED2 in red light, it means Device firmware upgrade failed.                               |

**During operating this mode, DAB would cut out the communication among VMC, BA and CC.**

| Function                             | Description                                                                                                                                                                                                            | Remark                                                                                                              |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Sorting Path and setting             | DAB would check if [ <b>ecf</b> ] folder existed in Pen Drive, if yes, then go to this folder to get the file for upgrading.<br>If no [ <b>ecf</b> ] folder, then go to root older to find the ecf file for upgrading. | 1. [ <b>ecf</b> ] wording can be big or small letter.<br>2. User can create ecf folder on USB Pen Drive in advance. |
| Recognize and Read the firmware file | This firmware would be with extension file name " <b>.ecf</b> " for DAB to recognize.                                                                                                                                  | In case of two files existed, DAB would choose the latest one to process of firmware upgrade.                       |
| Upgrade DAB Firmware                 | In process of the firmware upgrade with " <b>.bin</b> " file.                                                                                                                                                          | DAB would run this new firmware once the upgrade finished.                                                          |

**Note:**

1. Please make sure the firmware of BA/CC or ICT SP1 Printer must be saved to the root folder or the folder "**ecf**" of USB Pen Drive before inserting this Pen Drive to DAB.
2. Please do not put the different version firmware in the same USB Pen Drive, or the wrong firmware version.

**Upgrade fail with below LED indicators:**

**Error LED indicators as below would flash with 2 sec period in recycle.**

|                                                         |                                                                                                       |
|---------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| DAB USB Pen Drive failed                                |  Flash one time    |
| Coin Change firmware upgrade failed                     |  Flash two times   |
| Bill Acceptor firmware upgrade failed                   |  Flash three times |
| CL firmware upgrade failed                              |  Flash four times  |
| Document Check (DC) firmware upgrade failed             |  Flash five times  |
| ICT SP1 Printer firmware upgrade failed (in the future) |  Flash six times   |

## 1-10. Log export Mode (only for ICT Engineer Debug Use)

To operate this mode, the user needs to first press DAB's **"Select"** button to select the LED3 in amber light. Plug in the USB Pen Drive, press **"Enter"** button, then the LED3 would flash in amber for processing the log data export. When the LED3 turns to green light, it means the log export finished, the user can un-plug the USB Pen Drive, DAB would be returned to stand by mode.

### LED Indicator

|                                                                                                          |                                                             |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| <br>LED1 LED2 LED3 LED4 | LED3 shine in amber, it means system in "Log export mode"   |
| <br>LED1 LED2 LED3 LED4 | LED3 flash in amber, it means the Log file in exporting.    |
| <br>LED1 LED2 LED3 LED4 | LED3 shine in green, it means the Log file export complete. |
| <br>LED1 LED2 LED3 LED4 | LED3 shine in red, it means the Log file export fail.       |

| Function                        | Description                                                                                         | Remark                                                                                                                                                                                             |
|---------------------------------|-----------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Log Data output                 | Log file data would upload to the folder “ <b>LOG</b> ” of USB Pen Drive.                           | Output file name:<br>“Serial number_LOG_MDB_read time.bin”.<br>“Serial number_LOG_VCCS_read time.bin”.<br>“Serial number_LOG_VCCS_DEVICE_read time.bin”.<br>“Serial number_LOG_NDE_read time.bin”. |
| Device Error Status Data output | Device error status file data would upload to the folder “ <b>DEVICE_STATUS</b> ” of USB Pen Drive. | Output file name:<br>“Serial number_DEVICE_STATUS_read time.bin”.                                                                                                                                  |

**Note:**

1. The user must press “**Enter**” button within 10 seconds. Otherwise, DAB will be returned to “**Stand by mode**” automatically.
2. During operating this mode, DAB would cut out the communication among VMC, BA and CC.
3. Please do not remove USB drive before Log file uploading finished.

### Log records message

| Message          | Description                                                               |
|------------------|---------------------------------------------------------------------------|
| LOG_OUT          | Log export                                                                |
| PC_TOOL          | Setup and test function execution                                         |
| AUDIT            | Transaction data Export                                                   |
| AUDIT_BACKUP_OUT | EVA\DTS backup export                                                     |
| DOWNLOAD         | Devices firmware upgrade(USB Pen Drive)                                   |
| UPGRADE          | DAB firmware upgrade                                                      |
| RETURN FACTORY   | Recovery Factory                                                          |
| CONFIG           | DEX Config                                                                |
| PRINT_START      | The printer starts printing                                               |
| PRINT_END        | The printer end printing                                                  |
| SETTINGS         | DAB setting mode execution (USB Pen Drive)                                |
| SETTINGS_SERVER  | DAB setting mode execution (Server)                                       |
| DOWNLOAD_SERVER  | Devices firmware upgrade(Server)                                          |
| RESTART          | DAB reboot                                                                |
| REPEATING        | Log records repeat, will not record.                                      |
| UPGRADE(USB)=    | DAB upgrade record of the USB pen drive (content is Model Name: Checksum) |
| UPGRADE(SERVER)= | DAB upgrade record of the server (content is Model Name: Checksum)        |

### Device Error Status records

Record error status codes for DAB, BA, CC, VMC and Printer peripherals.

1-11. Setup and Testing Mode (link to PC Tool)

To operate Audit Box Tool (WinXP OS or above environment) to set up DAB's parameters, the user need to at first press DAB's **“Select”** button to select both LED1 & LED3 to shine in amber, and then press **“Enter”** button to entry to **“Setup and testing mode”** . Then, plug in double-male A-type USB cable to connect PC to DAB, opening Audit Box Tool on your PC. When both LED1 & LED3 are in green, it means the connection is successful. When the parameter settings finished, then to remove the USB cable, the DAB would be returned to the stand by mode.

LED Indicator

|                                                                                                          |                                                                                     |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <br>LED1 LED2 LED3 LED4 | LED1 & LED3 shine in amber, it means system in <b>“Setup and testing mode”</b> .    |
| <br>LED1 LED2 LED3 LED4 | LED1 & LED3 shine in red, it means system entered <b>“Setup and testing mode”</b> . |
| <br>LED1 LED2 LED3 LED4 | LED1 & LED3 shine in green, it means system connected to tool.                      |

Setup and testing mode function

| Function                        | Description                                                                                                                                                              | Note |
|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
| Communication to Audit Box Tool | 1. Function test: GPIO, FRAM, External Flash, etc.<br>2. Parameter Setup: Local Time, Serial number, etc.<br>3. Version Checking: DAB FW version, Checksum version, etc. |      |

Note:

- 1. On this mode, you should have power supply to support power to DAB.
- 2. The user must press **“Enter”** button within 10 seconds. Otherwise, DAB will be returned to **“Stand by mode”** automatically.

## 1-12. Audit Backup Data Export Mode (History data)

To operate this mode, the user need to at first press DAB's **"Select"** button to select both LED2 & LED3 to shine in amber, then plug in the USB Pen Drive, and press **"Enter"** button to entry to **"Audit's backup data Export mode"**. Both LED2 & LED3 would flash in amber for data exporting. When both LED2 & LED3 are in green, it means the EVA/DTS file export finished. For this time, the user can un-plug the USB Pen Drive, the DAB would be returned to the stand by mode.

### LED Indicator

|                                                                                   |                                                                                |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
|  | LED2 & LED3 shine in amber , it means system in <b>"EVA/DTS export mode"</b> . |
|  | LED2 & LED3 flash in amber, it means the EVA/DTS file in exporting.            |
|  | LED2 & LED3 shine in green, it means the EVA/DTS file export complete.         |
|  | LED2 & LED3 shine in red, it means the EVA/DTS file export fail.               |

### EVA/DTS export mode function

| Function                       | Description                                                                  | Note                                                             |
|--------------------------------|------------------------------------------------------------------------------|------------------------------------------------------------------|
| EVA/DTS file export            | EVA/DTS file save to the <b>"EVA DTS Backup"</b> folder of USB driver.       | Export filename:<br>[ Serial number_BACKUP_read time.eneva ]     |
| Single Transaction file export | All Single transaction save to the <b>"PAY_Backup"</b> folder of USB driver. | Export filename:<br>[ Serial number_PAY_BACKUP_read time.enbin ] |

#### Note:

1. The user must press **"Enter"** button within 10 seconds. Otherwise, DAB will be returned to **"Stand by mode"** automatically.
2. filename extension as [eneva] [enbin] means the file is encryption file.
3. The method to decrypt backup file, please refer the chapter Audit Box Tool .

1-13. DAB Recovery Factory Mode

To operate this mode, the user need to at first press DAB’s **“Select”** button to select all the LED1, LED2 & LED3 to shine in amber. And then press **“Enter”** button for 3 seconds to entry to **“DAB recovery factory mode”** , system will recovery factory. When all the LED1, LED2 & LED3 are in green, it means DAB recovery factory finished, and the DAB would be returned to stand by mode.

LED Indicator

|                                                                                                          |                                                                                            |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| <br>LED1 LED2 LED3 LED4 | LED1, LED2 & LED3 shine in amber , it means system in <b>“DAB Recovery Factory mode”</b> . |
| <br>LED1 LED2 LED3 LED4 | LED1, LED2 & LED3 shine in green, it means the recovery Factory complete.                  |

DAB Recovery Factory function

| Function                        | Description                                                                                                                                                                      |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Peripheral device update record | When the user changes a new BA/CC instead of original one. In this case, we must tell DAB the new BA/CC replaced happened and ask for DAB can start the upgrade process via FTL. |
| Log Data                        | DAB Log data clearing .                                                                                                                                                          |
| Device Error Status Data        | Device Error Status data clear                                                                                                                                                   |
| EVA/DTS Data                    | EVA/DTS data clear                                                                                                                                                               |
| Single Transaction Data         | Single transaction data clear                                                                                                                                                    |
| EVA/DTS Backup Data             | EVA/DTS backup data clear                                                                                                                                                        |

**Note:**

The user must press **“Enter”** button within 10 seconds. Otherwise, DAB will be returned to **“Stand by mode”** automatically.

## 1-14. Parameter Setting Mode (via USB Pen Drive)

To operate this mode, the user need to at first press DAB's **"Select"** button to select LED4 in amber light, then plug in the USB Pen Drive, and press **"Enter"** button to entry to **"Parameter Setting mode"** to write down the parameters to DAB. When LED4 indicator turns to green light, the parameter setting finished. After that, the user can un-plug the USB Pen Drive, the DAB would be returned to the stand by mode.

### LED Indicator

|                                                                                                          |                                                                       |
|----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------|
| <br>LED1 LED2 LED3 LED4 | LED4 in amber light means system in <b>"Parameter Setting Mode"</b> . |
| <br>LED1 LED2 LED3 LED4 | LED4 in flash means system in process of the Parameter Setting.       |
| <br>LED1 LED2 LED3 LED4 | LED4 in green light means the Parameter Setting finished and success. |
| <br>LED1 LED2 LED3 LED4 | LED4 in red light means the Parameter Setting failed.                 |

### Note:

1. The user must press **"Enter"** button within 10 seconds. Otherwise, DAB will be returned to "Stand by mode" automatically.
2. The user should save the parameters setting via Audit Box Tool into the USB Pen Drive before operating this mode.

## 2. DAB Audit Box Tool

### 2-1. Before Start


DAB Audit Box Tool is designed with English version. The user can change it to what language you want. To achieve this, please, after tool installed on your PC, find out the **Global.ini** on the folder of **\My Documents\ICT\Audit Box Tool\Language** and open it as below screen:

```
getText = Obtain
setText = Set
informationText = Information
noTest = No.
resultTest = Result
clearButtonText = Clear
startText = Start
ExportButtonText = Export
addressLabelText = Address:
writeButtonText = Write
readButtonText = Read
otherButtonText = Extra
```

You can change the English texts the right side of “=” to what language characters you want. Please don’t change the texts the left side of “=”. Save the file after you finished.

Open the tool program and it would show you below screen to setup the font.

#### Font initialized settings

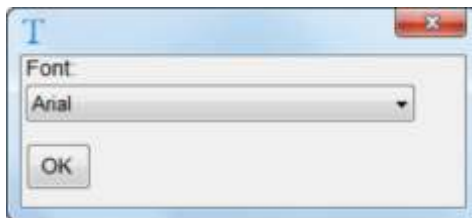


2-1 FIG.01

#### Please note:


You can skip this section if you would use English version of Audit Box Tool.

## 2-2. Audit Box Tool Introduction

Before starting, please install Audit Box Tool on your PC (WinXP or above). Open Audit Box Tool and it would show the GUI screen as below:

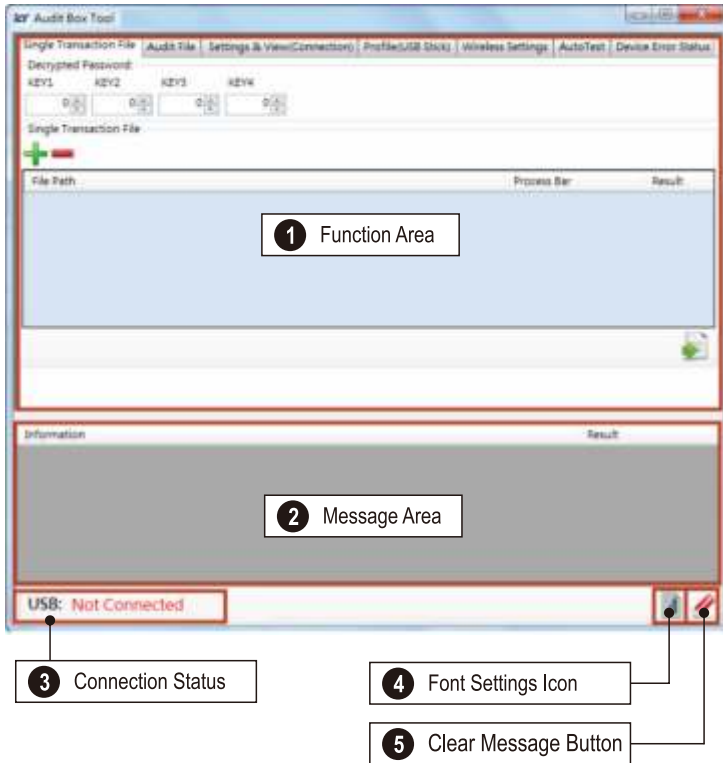

Please connect DAB to your PC via USB-to-USB cable (please refer to section 1-12). When DAB connected successful, the screen “3” will be changed to below:



2-3. Profile (USB Stick)

Please choose and click “**DAB-V**” on menu driven to entry this setting screen.

DAB-V



|                                                                    |                                           |
|--------------------------------------------------------------------|-------------------------------------------|
| Encryption Key:                                                    | KEY1: 0 KEY2: 0 KEY3: 0 KEY4: 0           |
| Decimal Places                                                     | 0                                         |
| Magnification                                                      | 1                                         |
| Maximum deduction amount of cashless                               | 1 <input type="checkbox"/> Full deduction |
| Maximum bill of bill acceptor(0 means no limit)                    | 0                                         |
| Pressing into bill fail when bill acceptor in error state:         | Non-acceptable coin                       |
| Does the bill acceptor stop bill's transaction after being fished? | No                                        |
| Print Script                                                       | Set                                       |
| Print Settings                                                     | Set                                       |
| Goods Name and Tax Rate                                            | Set                                       |

Function Icon

| Icon                                                                                | Name | Function                                                                                                            |
|-------------------------------------------------------------------------------------|------|---------------------------------------------------------------------------------------------------------------------|
|  | Save | Save the parameters to USB Stick<br>*Before to save data, please plug USB Stick into your PC                        |
|  | Read | Read parameter from USB Stick that your saved last time<br>*Before to save data, please plug USB Stick into your PC |

The screenshot shows the DAB-V configuration window. It has a title bar with 'DAB-V' and standard window controls. Below the title bar is a table of settings. Each row has a numbered callout (1-8) on the left. The settings are:

|                                                                      | KEY1:               | KEY2: | KEY3:                                     | KEY4: |
|----------------------------------------------------------------------|---------------------|-------|-------------------------------------------|-------|
| 1 Encryption Key                                                     | 0                   | 0     | 0                                         | 0     |
| 2 Decimal Places                                                     | 0                   |       |                                           |       |
| 3 Magnification                                                      | 1                   |       |                                           |       |
| 4 Maximum deduction amount of cashless                               | 1                   |       | <input type="checkbox"/> Full deduction 5 |       |
| 6 Maximum bill of bill acceptor(0 means no limit)                    | 0                   |       |                                           |       |
| 7 Pressing into bill fail when bill acceptor in escrow state:        | Non-refundable coin |       |                                           |       |
| 8 Does the bill acceptor stop bill's transaction after being fished? | No                  |       |                                           |       |

At the bottom, there are two buttons: 'Device Control' and 'Exit'.

### 1. Encryption Key:

Encryption for Audit data, including EVA/DTS & Single Transaction. Factory default is 0 , 0 , 0 , 0. **Note:** Please take good care of the four digit keys.

### 2. Decimal Places:

Set the decimal point, you can set it to be 0, 1, 2.

### 3. Magnification:

You can set this magnification to be 1, 10, 100, 1000 while decimal set to 0.

### 4. Maximum deduction amount of cashless:

The maximum deduction amount of the cashless device is automatically adjusted to the minimum value according to the user's set magnification and decimal point. The maximum value is 100000.

### 5. Full deduction:

When this option is checked, the amount transferred by the cashless device will be deducted in full.

### 6. Maximum bill of bill acceptor:

Set up the max. bank note currency that your BA would accept to. If set up to 0 means the currency is unlimited. The range would be 0~10000000.

**Note:** This setting is available only for BA with MDB interface and ICT104V interface.

### 7. Pressing into bill fail when bill acceptor in escrow state:


You can choose "Non-refundable coin" or "Refund coin".

### 8. Does the bill acceptor stop bill's transaction after being fished:

Choosing Yes will stop trading. Choosing No will not stop trading.

2-3-1. Printer Scripe

Click [ Set ] icon of Print Script, the screen is as below.

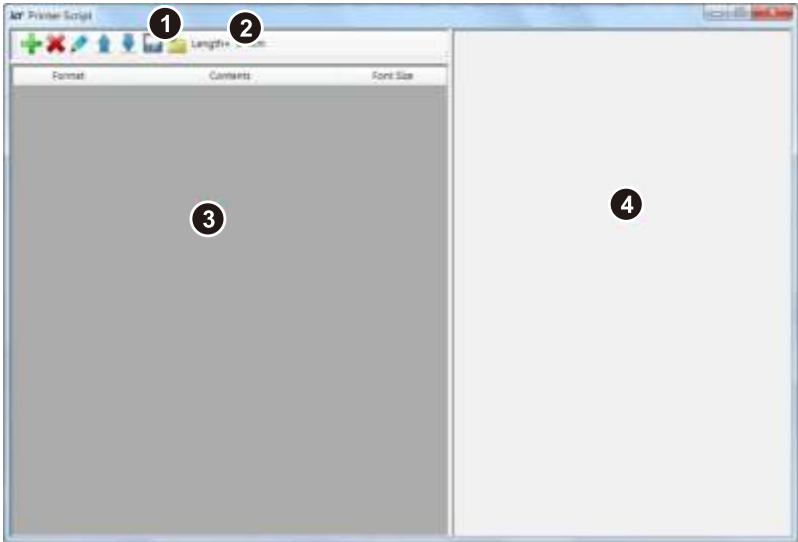


| Zone | Function Name                | Function Description                        |
|------|------------------------------|---------------------------------------------|
| 1    | Printing Function Icon       | Click icon for the print parameter settings |
| 2    | Print length (mm)            | Set up the paper length to print out        |
| 3    | Printing setting/edit window | A list for the Items you choose             |
| 4    | Pre-view window              | Pre-view for the printing script you edited |



## Zone 2: Printing Function Icon


| Icon                                                                                | Function  | Description                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Add       | Click and then automatically open [printing edit window]. Click [  ] after finished the data input.                                                          |
|    | Delete    | Delete the data you choose on [printing edit window].                                                                                                                                                                                         |
|    | Edit      | To edit what the printing function you choose. Click and then open [ printing setting/edit window]. After finished, then press [  ] to save the data edited. |
|    | Move-up   | Move-up cursor to choose the printing function you want.                                                                                                                                                                                      |
|   | Move-down | Move-down cursor to choose the printing function you want.                                                                                                                                                                                    |
|  | Store     | Store the printing settings to USB Pen Drive.<br>*Make sure the USB be plugged into your PC.                                                                                                                                                  |
|  | Read      | Read the printing settings from USB Pen Drive.<br>*Make sure the USB be plugged into your PC, and the setting value already existed inside.                                                                                                   |

Print edit window is as below-1

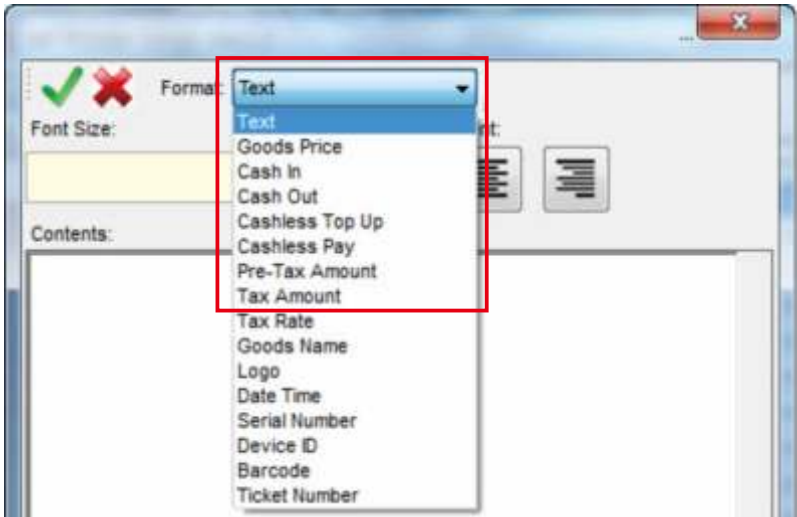

| Name            | Description                                                                                           |
|-----------------|-------------------------------------------------------------------------------------------------------|
| Text            | By this item, the user can key-in any texts to show on<br>Note: Five font-size be option for the user |
| Goods Price     | The item would show the goods price you vend                                                          |
| Cash In         | The item would show the cash-in value                                                                 |
| Cash Out        | The item would show the cash-out value                                                                |
| Cashless Top Up | The item would show the cashless top-up value                                                         |
| Cashless Pay    | The item would show the value you pay by cashless                                                     |
| Pre-Tax Amount  | The item would show the goods price of pre-tax                                                        |
| Tax Amount      | The item would show the value of the goods tax                                                        |


Print edit window is as below-2

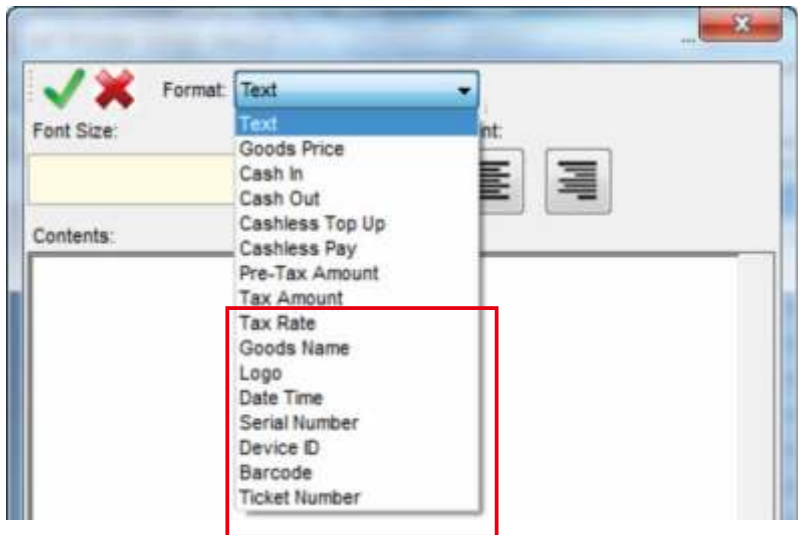

| Name          | Description                                                                                                         |
|---------------|---------------------------------------------------------------------------------------------------------------------|
| Tax Rate      | The item would show the tax rate you setup                                                                          |
| Goods Name    | The item would show the Goods name you key-in                                                                       |
| Logo          | You can add the photo, the format would be bmp、jpg、jpeg、png、gif、tif、tiff. It would translate to bmp format in mono. |
| Date Time     | The item would show the time while transaction happened                                                             |
| Serial Number | The item would show the DAB's built-in serial number                                                                |
| DAB Device ID | The item would show the DAB's device ID the user setup                                                              |
| Barcode       | The item would show the one or two-dimension bar code you setup                                                     |
| Ticket Number | The item would show the ticket number                                                                               |

Barcode

It can support QRCODE, UPC-A, UPC-E, EAN-8, EAN-13, CODE39, CODE128, ITF-25 for barcode creation.

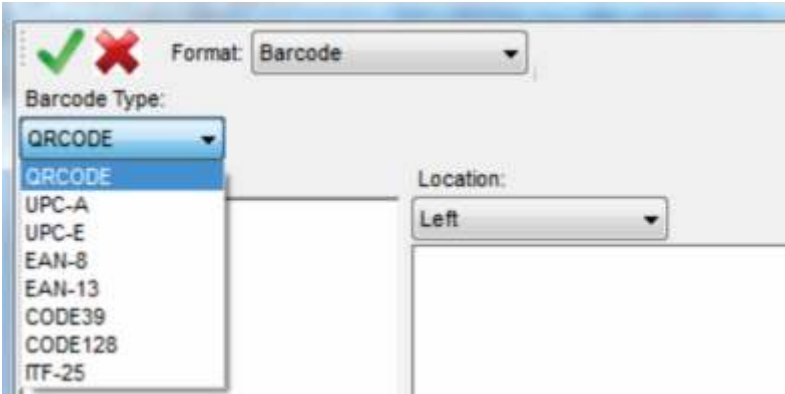

1. QRCODE

The user can key-in up to 100 words for generating the QRCODE.  
It can set up the location as below:

| Location   | Example |
|------------|---------|
| Left       |         |
| Center     |         |
| Right      |         |
| TWO-QRCODE |         |

## 2. UPC-A

Need to key-in 11 digits number to generate the barcode. The user can click [ Contents Label ] to show the digits on the bottom side of barcode.

Barcode Type:  
UPC-A  
☒ Contents Label  
Contents:  
12345678901  
Generate  
1 23456 78901 2

## 3. UPC-E

Need to key-in 6 digits number to generate the barcode. The user can click [ Contents Label ] to show the digits on the bottom side of barcode.

Barcode Type:  
UPC-E  
☒ Contents Label  
Contents:  
123456  
Generate  
0 123456 1 5

## 4. EAN-8

Need to key-in 7 digits number to generate the barcode. The user can click [ Contents Label ] to show the digits on the bottom side of barcode.

Barcode Type:  
EAN-8  
☒ Contents Label  
Contents:  
1234567  
Generate  
1234 5670

## 5. EAN-13

Need to key-in 12 digits number to generate the barcode. The user can click [ Contents Label ] to show the digits on the bottom side of barcode.



The screenshot shows a web interface for generating an EAN-13 barcode. At the top, there is a dropdown menu labeled 'Barcode Type' with 'EAN-13' selected. Below it is a checkbox labeled 'Contents Label' which is checked. Underneath is a text input field labeled 'Contents:' containing the number '123456789012'. To the right of the input field is a blue button labeled 'Generate'. Below the input field is a preview of the generated barcode, which is a standard EAN-13 barcode with the number '1 234567 890128' printed below it.

## 6. CODE39

Need to key-in up to 12 digits number to generate the barcode. The user can click [ Contents Label ] to show the digits on the bottom side of barcode. And Click [ Check Digit ] icon, one "digit" would be followed by the code you key-in.

Note: Code39 could support the following characters, like 「A~Z」, 「0~9」, 「+」, 「-」, 「\*」, 「/」, 「space」, 「\$」, 「%」, etc.



The screenshot shows a web interface for generating a CODE39 barcode. At the top, there is a dropdown menu labeled 'Barcode Type' with 'CODE39' selected. Below it are two checkboxes: 'Contents Label' (checked) and 'Check Digit' (checked). Underneath is a text input field labeled 'Contents:' containing the alphanumeric string 'ABCDEFGHJK'. To the right of the input field is a blue button labeled 'Generate'. Below the input field is a preview of the generated barcode, which is a CODE39 barcode with the string 'ABCDEFGHJK-' printed below it.

## 7. CODE128

Need to key-in up to 12 digits number to generate the barcode. The user can click [Contents Label] to show the digits on the bottom side of barcode. Note: Code128 could support the following characters, capital letters, small letters, digits, ASCII, etc.



The screenshot shows a web interface for generating a CODE128 barcode. At the top, there is a dropdown menu labeled 'Barcode Type' with 'CODE128' selected. Below it is a checkbox labeled 'Contents Label' which is checked. Underneath is a text input field labeled 'Contents' containing the string '123456789abcde'. To the right of the input field is a blue button labeled 'Generate'. Below the input field and button is a preview of the generated barcode, which is a standard 1D barcode with the text '123456789abcde' printed below it.


## 8. ITF-25

Need to key-in up to 24 digits number to generate the barcode. The user can click[ Contents Label] to show the digits on the bottom side of barcode. And Click[ Check Digit] icon, one “digit” would be followed by the code you key-in.



The screenshot shows a web interface for generating an ITF-25 barcode. At the top, there is a dropdown menu labeled 'Barcode Type' with 'ITF-25' selected. Below it are two checkboxes: 'Contents Label' (checked) and 'Check Digit' (checked). Underneath is a text input field labeled 'Contents' containing the string '12345678901234567890123'. To the right of the input field is a blue button labeled 'Generate'. Below the input field and button is a preview of the generated barcode, which is a standard 1D barcode with the text '123456789012345678901230' printed below it.

2-3-2. Printer Settings

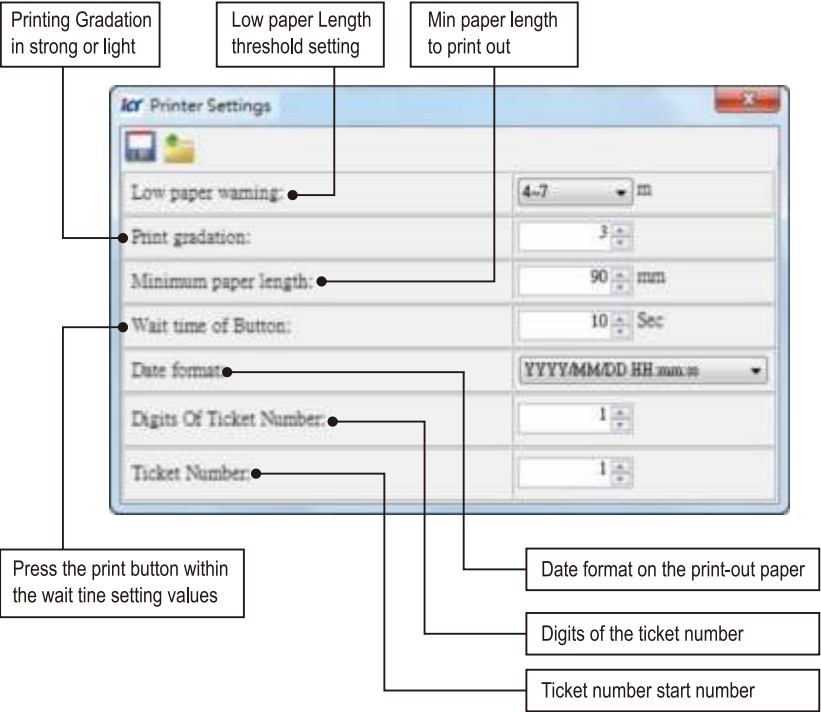


Function Icon

| Icon | Function | Description                                                                                    |
|------|----------|------------------------------------------------------------------------------------------------|
|      | Save     | Save the parameters to USB Stick.<br>*Before to save data, please plug USB Stick into your PC. |
|      | Read     | Save the parameters to USB Stick.<br>*Before to save data, please plug USB Stick into your PC. |

### 2-3-3. Product Name & Tax Rate Edit Tool


Click [Set] icon of Goods Name and Tax Rate

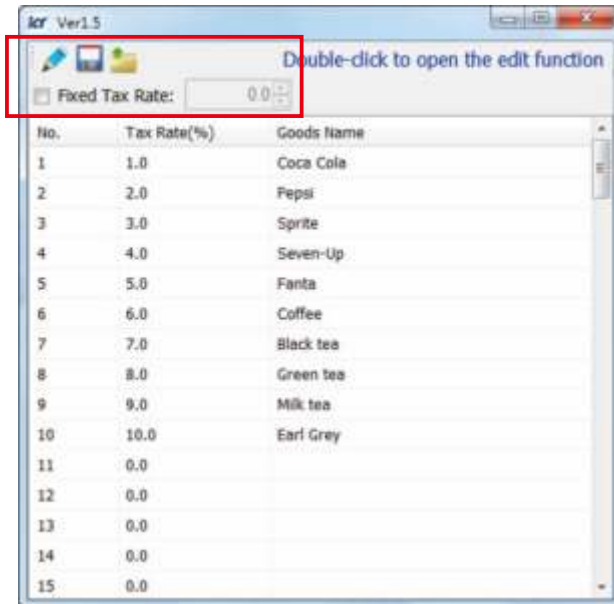

| Icon                                                                                | Function       | Description                                                                                                  |
|-------------------------------------------------------------------------------------|----------------|--------------------------------------------------------------------------------------------------------------|
|  | Edit           | Open edit window.                                                                                            |
|  | Save           | Save the tax rate and goods name to USB Stick<br>*Before to save data, please plug USB Stick into your PC.   |
|  | Read           | Read the tax rate and goods name from USB Stick<br>*Before to save data, please plug USB Stick into your PC. |
| <input type="checkbox"/> Fixed Tax Rate: 0.0                                        | Fixed Tax Rate | All channel tax rate fixed.                                                                                  |

2-4. Settings & View (connection)

Before the settings, please connect your DAB to PC (please refer to section 1-10). The setting screen is as below:

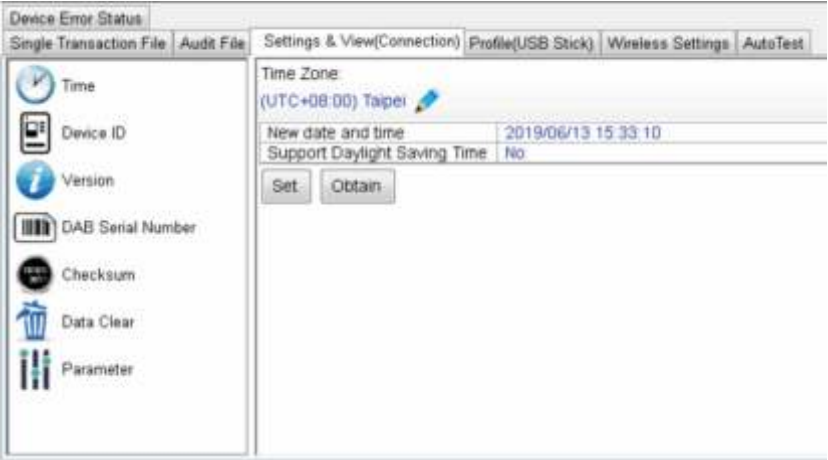

**Time:**

Function Screen:



| Function       | Description                                           |
|----------------|-------------------------------------------------------|
| Setup DAB time | Press [ Set ] and DAB would copy your PC time to DAB. |
| Get DAB time   | Press [ Obtain ] to obtain the current time of DAB.   |

## Time Zone Choose

Function Screen:

Standard Time Zone ▼  New date and time: 2019/06/13 09:04:40

Time Zone:  
 (UTC+01:00) Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna ▼

Daylight Saving Time  
☒ Support daylight saving time Daylight Saving Time Begin: Yes

| Daylight Saving Time Start Rule |           | Daylight Saving Time End Rule |           |
|---------------------------------|-----------|-------------------------------|-----------|
| Month:                          | March     | Month:                        | October   |
| Week:                           | Last Week | Week:                         | Last Week |
| Day Of Week:                    | Sunday    | Day Of Week:                  | Sunday    |
| Time:                           | 02:00     | Time:                         | 03:00     |

## Message Screen:

| Information                                                     | Result |
|-----------------------------------------------------------------|--------|
| Daylight Saving Time End Rule=>March/First Week/Tuesday/15:00   | ✓      |
| Daylight Saving Time Start Rule=>January/Last Week/Sunday/02:00 | ✓      |
| Daylight saving time is over                                    | ✓      |
| Daylight saving time is supported in this area                  | ✓      |
| Set device time 2018/03/06 14:18:35 Tuesday                     | ✓      |



**Version Icon:**

Function  
Screen:

Program Version:



Boot Loader1 Version:



Boot Loader2 Version:



| Function                                         | Description                                    |
|--------------------------------------------------|------------------------------------------------|
| To acquire program version                       | Press [Obtain] to acquire program version.     |
| To acquire Boot Loader 1 & Boot loader 2 version | Press [Obtain] to acquire Boot Loader version. |

**Message Screen:**

| Information                         | Result |
|-------------------------------------|--------|
| Boot loader2 version=DABEX0003      | ✓      |
| Boot loader1 version=EM00100030000  | ✓      |
| Program version=DABEX0000910012xxxx | ✓      |



**DAB Serial Number Icon:**

Function  
Screen:

DAB Serial Number:



| Function           | Description                                  |
|--------------------|----------------------------------------------|
| Read Serial Number | Press [ Obtain ] to read DAB's Serial Number |

**Message Screen:**

| Information                    | Result |
|--------------------------------|--------|
| DAB serial number=012345678912 | ✓      |



### Device ID Icon:

Function  
Screen:

Device ID:

Set Obtain

| Function         | Description                                                          |
|------------------|----------------------------------------------------------------------|
| Set Device ID    | Press [Set] button to input DAB's Device ID, total five codes input. |
| Obtain Device ID | Press [Obtain] button to obtain DAB's Device ID.                     |

Note: This column is for customer to set up.

### Message Screen:

| Information               | Result |
|---------------------------|--------|
| Device ID=A123456789-0123 | ✓      |
| Device ID set successful. | ✓      |



### Checksum Icon:

Function  
Screen:

Program Checksum:

Obtain

Default Checksum:

Obtain

| Function                    | Description                                         |
|-----------------------------|-----------------------------------------------------|
| To acquire program Checksum | Press [Obtain] to acquire system operation Checksum |
| To acquire default Checksum | Press [Obtain] to acquire system default Checksum   |

### Message Screen:

| Information           | Result |
|-----------------------|--------|
| Default Checksum=D99E | ✓      |
| Program Checksum=D99E | ✓      |



**Data Clear Icon**

Function  
Screen:

Log Clear:



Audit Clear:



| Function    | Description                                                                                                                    |
|-------------|--------------------------------------------------------------------------------------------------------------------------------|
| Log Clear   | Press [Clear] button to clear all log data record on DAB                                                                       |
| Audit Clear | Press [Clear] button to clear all audit data record on DAB, including EVA/DTS data,EVA/DTS backup data,single transaction data |

**Message Screen:**

| Information            | Result |
|------------------------|--------|
| Audit clear successful | ✓      |
| Clearing audit         |        |
| Log clear successful   | ✓      |
| Clearing log           |        |

2-5. Audit File

To make the EVA/DTS file in decryption. Please note that the DAB doesn't need to be connected to PC to operating this function.



Function Description:

| Function           | Description                                                                                                                                                                                                                                                                                                                                        |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Decrypted Password | <div><div>Decrypted Password:</div><div>KEY1KEY2KEY3KEY4</div><div><input type="text" value="0"/><input type="text" value="0"/><input type="text" value="0"/><input type="text" value="0"/></div></div> <p>Input the numbers in KEY1~KEY4 for decryption.<br/>If your encryption setting is 0,0, 0,0 then the decryption would also be 0,0,0,0</p> |
| Add audit file     | Press [  ] to add audit file                                                                                                                                                                                                                                    |
| Delete audit file  | Press [  ] to delete selected audit file                                                                                                                                                                                                                        |
| Export audit file  | Press [  ] to export audit file                                                                                                                                                                                                                                 |

Export Audit File

| File Path                                   |  | Result |
|---------------------------------------------|--|--------|
| G:\EVADTS\222222222220_20170620164558.eneva |  | ✓      |
| G:\EVADTS\222222222220_20170620164915.eneva |  | ✓      |
| G:\EVADTS\222222222221_20170620163355.eneva |  | ✓      |
| G:\EVADTS\222222222221_20170620163428.eneva |  | ✓      |

| No. | Information                             | Result |
|-----|-----------------------------------------|--------|
| -   | 222222222221_20170620163428.jpg Created | ✓      |
| -   | 222222222221_20170620163355.jpg Created | ✓      |
| -   | 222222222220_20170620164815.jpg Created | ✓      |
| -   | 222222222220_20170620164558.jpg Created | ✓      |

**Note:** It would automatically output the transaction summary in .jpg format. The transaction summary is a kind of period data from the last time you “audit” (means you plug USB Pen Drive to get the audit data) to this moment you “audit”. It can assist the customer to manage the account for each vending machine in period.

## 2-6. Single Transaction File

To decrypt the single transaction data (\*.enbin file) and export the decrypted (\*.bin file) to readable Excel file. Please note that the DAB doesn't need to be connected to PC to operating this function.

Setting Screen is as below:



| Function                       | Description                                                                                                                                                                                                                   |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Decrypted Password             |  <p>Input the numbers in KEY1~KEY4 for decryption.<br/>If your encryption setting is 0,0, 0,0 then the decryption would also be 0,0,0,0</p> |
| Add single transaction file    | Press [  ] to add single transaction file                                                                                                  |
| Delete single transaction file | Press [  ] to delete selected single transaction file                                                                                      |
| Export single transaction file | Press [  ] to export single transaction file                                                                                               |

Export Single Transaction File

| File Path                                                  | Process Bar | Result |
|------------------------------------------------------------|-------------|--------|
| F:\Pay\99999999002_PAY_20170629004635_20170629005216.enbin | 100%        |        |

| No. | Information                                               | Result |
|-----|-----------------------------------------------------------|--------|
| -   | 99999999002_PAY_20170629004635_20170629005216.pdf Created |        |
| -   | 99999999002_PAY_20170629004635_20170629005216.xls Created |        |

The decrypted file will be stored on the file folder [ "Select Path"\Pay\Decrypted Files\ "serial number"]

The Excel file will be stored on the file folder [ "Select Path"\Pay\ Excel \ "serial number"]

The Single file will be stored on the file folder [ "Select Path"\Pay\ Single \ "serial number"]

The PDF file will be stored on the file folder [ "Select Path"\Pay\ PDF \ "serial number"]

**Note:** If you see below message, then please contact ICT FAE to get the latest Audit/General Utility tool.



## 2-7. Auto Test

The user can execute a basic testing on DAB via AutoTest function.

Note: Before this operation, please connect your DAB to PC.

Device ID:

Time Zone: (UTC+08:00) Taipei 

|                              |                        |
|------------------------------|------------------------|
| New date and time            | 2019/06/13 15:32:35 35 |
| Support Daylight Saving Time | No                     |

 Start

The user can input Device ID (total 15- code) if it has already set up at the beginning. The user also can ignore it, jump to click “**Start**” icon.

### Choose time zone

Time Zone: (UTC+08:00) Taipei 

Press [ Start ] to test the DAB automatically as below.


**To check internal Flash & FRAM**

**To check the time setting on DAB**



## To check LED Indicator

According to LED color on menu screen, please press [ Success ] if correction or press [ Error ] if wrong.

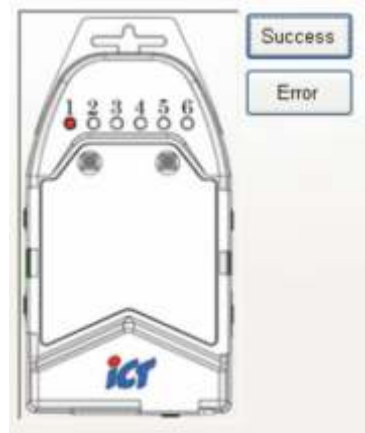

## To check DIP Switch

Operate the DIP switch to the corresponding state as shown, then press [ Check ]



## To check the button

To press DAB's "Select Button" then press [ Check ].

To press DAB's "Enter Button" then press [ Check ].




**To clear Audit data (if the DAB is set up the Device ID at the beginning)**

To press **"Yes"** then clear Audit data(including EVA/DTS data、single transaction、EVA/DTS backup data);press **"No"** then no data be cleared

**To clear Log data**

To press **"Yes"** then clear Log data; press **"No"** then no data be cleared

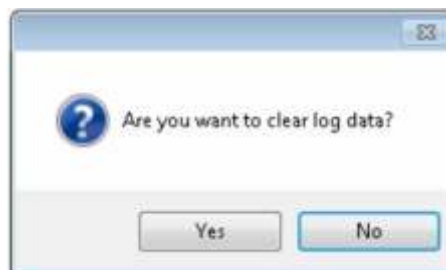

## Error Status & Troubleshooting

| Status                  | LED                                                                                                                 | Troubleshooting                                                                               |
|-------------------------|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|
| Program Error           | <br>LED1 LED2 LED3 LED4 LED5 LED6  | Plug-in USB Drive to re-upload program again.                                                 |
| DAB Oscillation Error   | <br>LED1 LED2 LED3 LED4 LED5 LED6  | Please send back to ICT for repair.                                                           |
| DAB Checksum Error      | <br>LED1 LED2 LED3 LED4 LED5 LED6  | Please send back to ICT for repair.                                                           |
| DAB start-code Error    | <br>LED1 LED2 LED3 LED4 LED5 LED6  | Please send back to ICT for repair.                                                           |
| Time re-set in abnormal | <br>LED1 LED2 LED3 LED4 LED5 LED6  | Change to the new coin battery in DAB.<br>Reset the time in General Utility.<br>Power-on DAB. |
| DAB Hardware Error      | <br>LED1 LED2 LED3 LED4 LED5 LED6 | Please send back to ICT for repair.                                                           |



**International Currency Technologies Corporation**

No.28, Ln. 15, Sec. 6, Minquan E. Rd., Neihu Dist., Taipei City 114, Taiwan

[sales@ictgroup.com.tw](mailto:sales@ictgroup.com.tw) (For Sales)

[fae@ictgroup.com.tw](mailto:fae@ictgroup.com.tw) (For Customer Service)

Website: [www.ictgroup.com.tw](http://www.ictgroup.com.tw)

