

XBA-EUR9(EUR4+USD5) Option Switch Settings 1:

Supported bill EUR 5, 10, 20, 50


USD 1, 5, 10, 20, 50 9 bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject Euro 5 & 10	ON							
★	Accept Euro 5 & 10	OFF							
	Reject Euro 20 & 50		ON						
★	Accept Euro 20 & 50		OFF						
	Reject USD 1 & 5			ON					
★	Accept USD 1 & 5			OFF					
	Reject USD 10 & 20				ON				
★	Accept USD 10 & 20				OFF				
	Reject USD 50					ON			
★	Accept USD 50					OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
	Reserved								ON
★	Reserved								OFF

Currency Assign Data

Bill value	Interface	MDB
BV1		Euro 5
BV2		Euro 10
BV3		Euro 20
BV4		Euro 50
BV5		USD 1
BV6		USD 5
BV7		USD 10
BV8		USD 20
BV9		USD 50

This dip switch is located at the side of XBA.

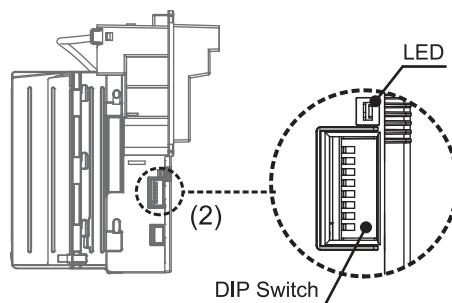

XBA-EUR9(EUR4+USD5) Switch Settings 2: (MDB)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Inhibit Active HIGH	ON							
★	Inhibit Active LOW	OFF							
	Reserved								
★	Reserved		OFF						
	Reserved			ON					
★	Reserved			OFF					
	Reserved				ON				
★	Reserved				OFF				
★	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2					ON			
	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0					OFF			
	Reserved						ON		
★	Reserved						OFF		
	Reserved							ON	
★	Reserved							OFF	
	Reserved								ON
★	Reserved								OFF

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note: 1. Calibrate card is needed.

This dip switch is located on the CPU board, remove the CPU board cover first.

